



Arlington Industries, Inc.


1 Stauffer Ind. Park - Scranton, Pa. 18517
 800-233-4717 Fax : 570-562-0646
 www.aifittings.com - E-MAIL : sales @ aifittings.com
 Manufacturers of Quality Electrical Products

TVBRA3K
TVBRA3KGC(w/ Ground Clip)



Installation Instructions For: TVBRA3K Pre-Wired TV Bridge for Flat Screen Televisions

Fully Assembled
 Box with pre-wired
 Receptacle

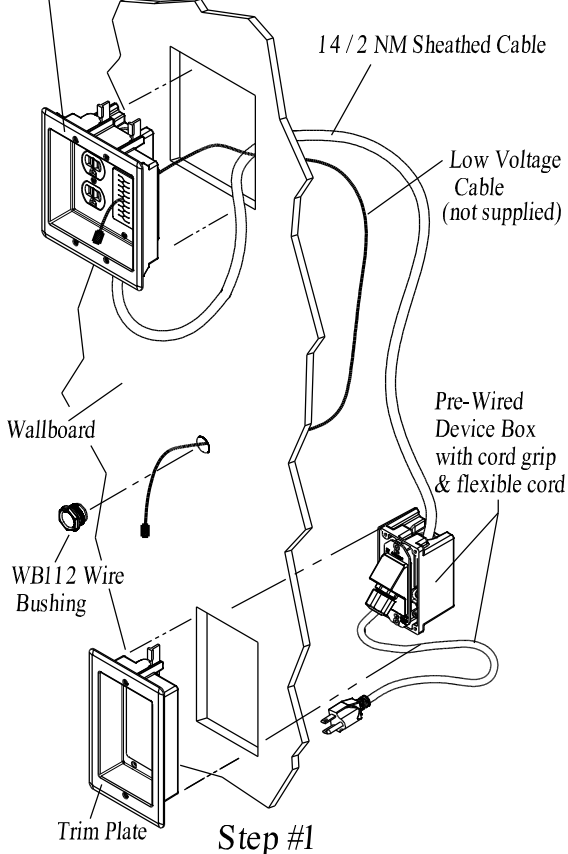


Step #1

- *Cut (2) holes in wall as follows;
 upper hole: 5-1/4" wide X 5-7/8" high, locating it in desired location for TV.
- lower hole: 3-1/2" wide X 5-7/8" high, locating it directly below the upper hole, close to an existing electrical outlet.
- *Drop the pre-wired Device Box Assembly & 14/2 Sheathed Cable thru upper hole & feed down toward lower hole.
- * If desired, install supplied WB112 Wire Bushing to route low-voltage cables to suit installation. Drill 1-1/8" hole & screw WB112 into wallboard to install.


Note:

- *This product is not designed to be an extension of a structure's hard wiring.
- *Components are not energized until the flexible cord is plugged into an existing outlet or surge protector.
- *Follow all instructions, do not plug in the flexible cord until installation is complete.

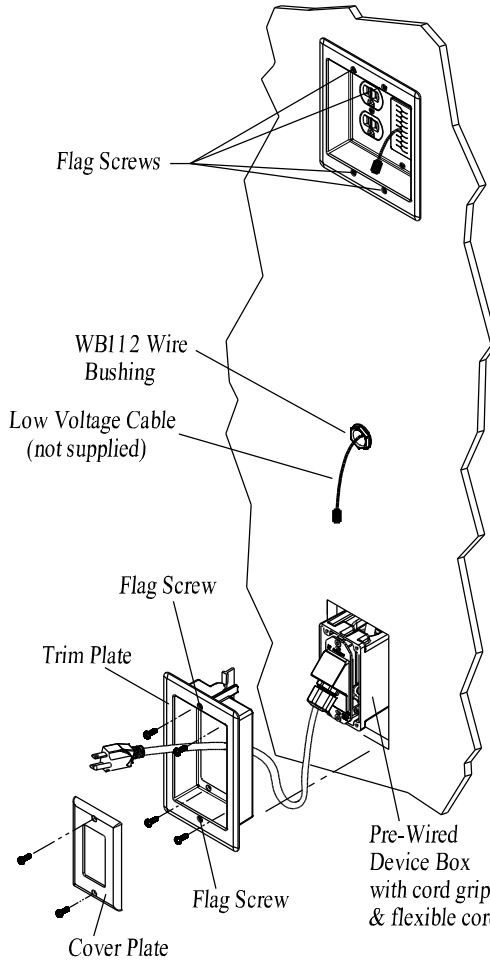

Step #2

- *Position & secure top box to wall by tightening (4) Flag Screws. (see illustration)
- *Pull Flexible Cord & Device Box thru lower hole & continue to pull Flexible Cord thru Trim Plate.
- * Attach Device Box to Trim Plate with (4) screws provided & secure Trim Plate to wall by tightening (2) Flag Screws.
- * Attach Cover Plate to Trim Plate using (2) screws provided.

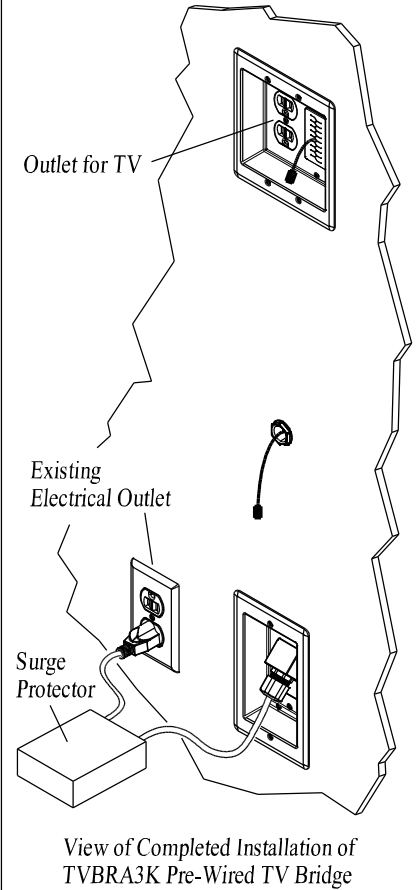

Step #3

- *Energize TVBRA3K Pre-Wired TV Bridge by plugging into existing outlet or surge protector.

If you have any questions or if parts are missing, please call our Customer Service Department at 1-800-233-4717.
 Do not call or return this product to your local store or distributor.