



## 4:1 HDMI/VGA/DP Switching Extender with Scaling Receiver, Relay Triggering and HDCP 2.2

EX-SW-0401-H2-PRO

SW-510-TX | SW-515-RX

### Application Programming Interface

Document Revision:	1.2
--------------------	-----

Document Date:	November 2020
----------------	---------------

Supported Firmware:	1.0.0 or higher
---------------------	-----------------

# Contents

<b>1. Overview</b>	<b>3</b>
1.1 Before You Begin	3
<b>2. Wiring and Communication Configuration</b>	<b>4</b>
2.1 RS-232 Connections	4
2.2 Serial and IP Settings	4
2.3 Command Overview	4
<b>3. Controlling the Switcher and Connected Devices</b>	<b>5</b>
3.1 Switching Inputs	5
Switching Input to Output	5
Powering On and Off Displays	5
Triggering Relay On and Off (Projector Screen Up/Down)	5
<b>4. Configuring the Switch</b>	<b>6</b>
4.1 Configuring a Static IP Address	6
4.2 Configuring Video	6
Configuring Input EDIDs	6
Enable/Disable HDCP Support	6
4.3 Configuring Device Switching Modes	7
Auto Switch Mode	7
Key Lock Function Enable/Disable	7
4.4 Configuring Relays	7
Relay mode	7
Relay Timing	7
4.5 Configuring CEC	8
CEC Auto Power ON/OFF	8
CEC Power Delay Time	8
4.6 Configuring the Serial Port and Command Structure	9
Serial Port Baudrate	9
Serial Port Data Type	9
Serial Command End Character	9
Edit Serial Command in ASCII String	9
Edit Serial Command in HEX String	9
<b>5. Troubleshooting</b>	<b>10</b>
Query Input Signal Status	10
Query Unit Firmware Version	10
Reboot Device	10
Restore Factory Defaults	10
Query Command List (Help)	10
<b>6. Contacting Technical Support</b>	<b>11</b>
<b>7. Document Revision History</b>	<b>11</b>
<b>Publication Disclaimer</b>	<b>12</b>

# 1. Overview

The following document contains the Application Program Interface (API) commands to control the SW-0501-HDBT and SW-1001-HDBT presentation switchers via serial and IP commands. Read this document in its entirety before starting any communication with the product.

## 1.1 Before You Begin

Verify that the following items are on hand and that all documentation is reviewed before continuing.

- EX-SW-0401-H2-PRO, SW-510-TX or SW-515-RX.....
- Control System and Control System Documentation .....
- PC or Mac for Configuring Product and Telnet Communications.....
- Visit the Product Page on [WyreStorm.com](https://www.wyrestorm.com) to download firmware and additional product information .....

## 2. Wiring and Communication Configuration

WyreStorm recommends that all wiring for the installation is run and terminated prior to making connections to the switcher. Read through this section in its entirety before running or terminating the wires to ensure proper operation and to avoid damaging equipment.

### 2.1 Connection Requirements


The SW-510-TX and SW-515-RX are the TX/RX from the EX-SW-0401-H2-PRO. The same API is used for both SKUs. However, there are some differences to make note of.

- The SW-510-TX does not contain a web server. Therefore, only RS-232 control of the switcher is possible.
- The SW-515-RX does contain a web server, Therefore, both LAN and RS-232 control is possible.
- If connecting the SW-510-TX and SW-515-RX together over HDBaseT then RS232 or LAN can be used to control both the TX and RX. However, in this scenario you must connect your control system to the SW-515-RX.

**Important!** If you are using the SW-510-TX or SW-515-RX as a standalone product - make note of the API requirements when specifying the output device. For example, when switching an input - you're required to include whether the switching command should be sent to the TX (510) or the RX (515).

### 2.2 RS-232 Connections

The following wiring diagrams show the pinouts for the switcher. While not shown, connect the TX (transmit) to RX (receive) pins at the control system or PC side of the cable. Most control systems and computers are configured for Digital Terminal Equipment (DTE) where pin 2 is RX and pin 3 is TX. This can vary from device to device, refer to the documentation for the connected device for pin functionality to ensure that the correct connections can be made.

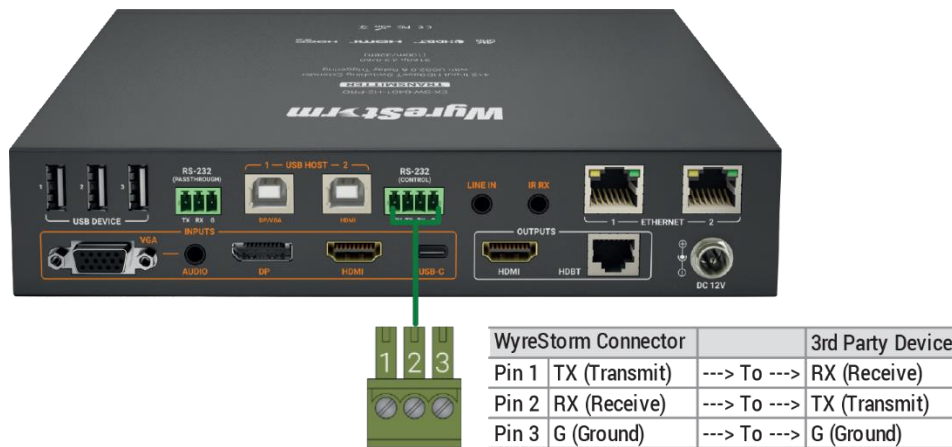

### 2.2 Serial and IP Settings

Baud rate:	115200
Data Bits:	8bits
Parity:	None
Stop Bits:	1bit
Flow Control:	None
Default IP Address:	192.168.11.43
Default IP Port:	23

### 2.3 Command Overview

Command Type:	ASCII
Key Words:	Case Sensitive
[Prm]:	optional parameters
[Input]:	Video Input (HDMI/HDBaseT/DP/VGA)
[Output]	Output Device (TX/RX)
Command termination:	<CR><LF>

## 3. Controlling the Switcher and Connected Devices

### 3.1 Switching Inputs

#### Switching Input to Output

---

Select Input and Output Mapping

SET SW [Input] [Output]<CR><LF>

Response: SW [Input] all<CR><LF>

Example: SET SW TXHDMI RX<CR><LF>

Response: SW TXHDMI RX<CR><LF>

[Input]=VGA | DP | TXHDMI | USBC | RXHDBT | RXHDMI1 | RXHDMI2

[Output]=RX | TX

Query Selected Output Mapping

GET MP [Output]<CR><LF>

Response: MP GET [Input] [Output]<CR><LF>

Example: GET MP RX<CR><LF>

Response: MP TXHDMI RX<CR><LF>

---

#### Powering On and Off Displays

---

##### IMPORTANT! Command Requirements

- This command only functions over RS-232 and cannot be used when controlling a display via IP
  - The display section of the web UI must be configured for display baud rate and contain commands entered into **Power On Code** and **Power Off Code** listed under **Display Control Commands**.
- 

Set CEC Power On/Off

SET CEC\_FN [Prm]<CR><LF>

Response: CEC\_FN [Prm]<CR><LF>

[Prm] = on | off

Example: SET CEC\_FN on<CR><LF>

Response: CEC\_FN on<CR><LF>

---

#### Triggering Relay On and Off (Projector Screen Up/Down)

---

SET PROSCR\_LR [Prm]<CR><LF>

Response: PROSCCR\_LR [Prm]<CR><LF>

Example: SET PROSCCR\_LR lowering<CR><LF>

[Prm] = lowering | raising

Response: PROSCCR\_LR lowering <CR><LF>

---

## 4. Configuring the Switch

### 4.1 Configuring a Static IP Address

By default, the switcher is set to a static IP of 192.168.11.043. We recommend changing this as it shared with other WyreStorm products and may cause improper communication if left unchanged. Connect to the RX via RS-232 and send the following command to set the IP address.

**Note:** The following commands can only be sent to the receivers (RX) RS-232 port.

Set Static IP Address

SET STATIC IPADDR [IP Address] [Netmask]<CR><LF>

Example: SET IPADDR STATIC 192.168.11.243 255.255.255.0 <CR><LF>

Response: IPADDR STATIC 192.168.11.243 255.255.255.0 <CR><LF>

Set DHCP IP Address

SET DHCP IPADDR<CR><LF>

Example: SET DHCP IPADDR<CR><LF>

Response: DHCP<CR><LF>

Query IP Address

GET IPADDR<CR><LF>

Response: IPADDR xx.xx.xx.xx<CR><LF>

Example: GET IPADDR<CR><LF>

Response: IPADDR 192.168.11.243<CR><LF>

### 4.2 Configuring Video

#### Configuring Input EDIDs

By default, all inputs are set to an EDID of 1920x1080@60Hz 2CH. However, this can be configured to suit the installation.

	[Input]=VGA   DP   TXHDMI   USBC   RXHDMI1   RXHDMI2
Set Input EDID	[Resolution]=
SET EDID [Input] [Resolution]<CR><LF>	VGA Input                      HDMI   DP   USB-C Inputs
Example:	
SET EDID TXHDMI 1920x1080@60Hz<CR><LF>	1024x768@60Hz 2CH    1024x768@60Hz 2CH
Response:	1280x768@60Hz        1280x720@60Hz
EDID TXHDMI 1920x1080@60Hz<CR><LF>	1360x768@60Hz        1360x768@60Hz
	1440x900@60Hz        1440x900@60Hz
Query Input EDID	1600x900@60Hz        1600x900@60Hz
GET EDID [Input]<CR><LF>	1680x1050@60Hz       1680x1050@60Hz
Example: GET EDID TXHDMI<CR><LF>	1920x1080@60Hz       1920x1080@60Hz
Response	1920x1200@60Hz       3840x2160@30Hz
EDID TXHDMI 1920x1080@60Hz<CR><LF>	

#### Enable/Disable HDCP Support

##### Set HDCP Support On/Off

SET HDCP\_S [Input] [Prm]<CR><LF>

Response: HDCP\_S [Input] [Prm]<CR><LF>

Example: SET HDCP\_S TXHDMI on<CR><LF>

Response: HDCP\_S TXHDMI on<CR><LF>

##### Query HDCP Support On/Off Status

GET HDCP\_S [Input]<CR><LF>

Response: HDCP\_S [Input] [Prm]<CR><LF>

Example: GET HDCP\_S TXHDMI <CR><LF>

Response: HDCP\_S TXHDMI on <CR><LF>

[Input]= TXHDMI | USBC | RXHDMI1 | RXHDMI2  
[Prm]=on | off

## 4.3 Configuring Device Switching Modes

### Auto Switch Mode

Enable/Disable Auto Switch Mode

SET AUTOSW\_FN [Prm]<CR><LF>

Response: AUTOSW\_FN [Prm]<CR><LF>

Example: SET AUTOSW\_FN on<CR><LF>

Response: AUTOSW\_FN on<CR><LF>

[Prm] = on | off

Query Auto Switch Mode Status

GET AUTOSW\_FN<CR><LF>

Response: AUTOSW\_FN [Prm]<CR><LF>

Example: GET AUTOSW\_FN<CR><LF>

Response: AUTOSW\_FN on<CR><LF>

### Key Lock Function Enable/Disable

Enable/Disable Key Lock

SET KEY\_FN [Prm]<CR><LF>

Response: KEY\_FN [Prm]<CR><LF>

Example: SET KEY\_FN on <CR><LF>

Response: KEY\_FN on<CR><LF>

[Prm] = on | off

Query Auto Switch Mode Status

GET KEY\_FN<CR><LF>

Response: KEY\_FN [Prm]<CR><LF>

Example: GET KEY\_FN<CR><LF>

Response: KEY\_FN on<CR><LF>

## 4.4 Configuring Relays

### Relay mode

Set Relay Mode

SET RELAY\_M [Prm]<CR><LF>

Response: RELAY\_M SET [Prm]<CR><LF>

Example: SET RELAY\_M latch<CR><LF>

Response: RELAY\_M latch<CR><LF>

[Prm] = latch | momentary

Query Relay Mode

GET RELAY\_M rx<CR><LF>

Response: RELAY\_M GET [Prm]<CR><LF>

Example: GET RELAY\_M<CR><LF>

Response: RELAY\_M latch<CR><LF>

### Relay Timing

Set Momentary Time

SET MOM\_T [Prm]<CR><LF>

Response: MOM\_T [Prm]<CR><LF>

Example: SET MOM\_T 8<CR><LF>

Response: MOM\_T 8<CR><LF>

[Prm] = 1 ~ 10 // seconds | default is 3s

Query Momentary Time

GET MOM\_T<CR><LF>

Response: MOM\_T [Prm]<CR><LF>

Example: GET MOM\_T<CR><LF>

Response: MOM\_T 8<CR><LF>

## 4.5 Configuring CEC

### CEC Auto Power ON/OFF

---

Set CEC AUTO POWER ON/OFF

SET DISPAUTO\_FN [Prm] rx<CR><LF>

Response: DISPAUTO\_FN [Prm] rx<CR><LF>

Example: SET DISPAUTO\_FN on<CR><LF>

Response: DISPAUTO\_FN on<CR><LF>

[Prm] = on | off

Query CEC AUTO POWER ON/OFF

GET DISPAUTO\_FN<CR><LF>

Response: DISPAUTO\_FN GET [Prm]<CR><LF>

Example: GET DISPAUTO\_FN<CR><LF>

Response: DISPAUTO\_FN GET on<CR><LF>

---

### CEC Power Delay Time

---

Set CEC POWER Delay Time

SET AUTOCEC\_D [Prm]<CR><LF>

Response: AUTOCEC\_D [Prm]<CR><LF>

Example: SET AUTOCEC\_D 2<CR><LF>

Response: AUTOCEC\_D SET 2<CR><LF>

---

[Prm] = 1~30 In Minutes with a default of 2min



## 4.6 Configuring the Serial Port and Command Structure

Note: Conditions on sending commands exist based on how the devices will be used in a system.

- When used together as a TX and RX commands can only be sent to the RX.
- When TX is used with a different HDBT receiver commands can only be sent to the TX.

---

### Serial Port Baudrate

Set Serial Port Baudrate  
SET UART\_B [Prm]<CR><LF>  
Response: UART\_B SET [Prm]<CR><LF>  
Example: SET UART\_B 115200<CR><LF>  
Response: UART\_B SET 115200<CR><LF> [Prm] = 9600 | 19200 | 38400 | 57600 | 115200  
Query Serial Port Baudrate // [PRM] is the baudrate.  
GET UART\_B<CR><LF>  
Response: UART\_B GET [Prm]<CR><LF>  
Example: GET UART\_B<CR><LF>  
Response: UART\_B 115200<CR><LF>

---

### Serial Port Data Type

Set Serial Data Type  
SET UART\_T [Prm]<CR><LF>  
Response: SET UART\_T [Prm]<CR><LF>  
Example: SET UART\_T string<CR><LF>  
Response: UART\_T string<CR><LF> [Prm] = string | hex  
Query Serial Data Type // str in [Prm] = ASCII string  
GET UART\_T<CR><LF>  
Response: UART\_T GET [Prm]<CR><LF>  
Example: GET UART\_T<CR><LF>  
Response: UART\_T string<CR><LF>

---

### Serial Command End Character

Set Serial Command End Character  
SET UART\_E [Prm]<CR><LF>  
Response: UART\_E [Prm]<CR><LF>  
Example: SET UART\_E crlf<CR><LF>  
Response: UART\_E crlf<CR><LF> [Prm] = null | cr | lf | crlf  
Query Serial Command End Character cr: carriage Response, ascii code is 0x0D.  
GET UART\_E<CR><LF> lf: line feed, ascii code is 0x0A.  
Response: UART\_E [Prm]<CR><LF>  
Example: GET UART\_E<CR><LF>  
Response: UART\_E crlf<CR><LF>

---

### Edit Serial Command in ASCII String

Set Serial Command ASCII String  
SET UART\_STR [Prm1] [Prm2]<CR><LF> [Prm1] = poweron | poweroff  
Response: UART\_STR [Prm1] [Prm2]<CR><LF> [Prm2] = xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx  
Example: SET UART\_STR on xxxx<CR><LF> // PRM2 is the original command according to device guidelines  
Response: UART\_STR on xxxx<CR><LF>

---

### Edit Serial Command in HEX String

Set Serial Command HEX String  
SET UART\_HEX [Prm] [Hex String]<CR><LF> [Prm] = poweron | poweroff  
Response: UART\_HEX SET [Prm] [Hex String] <CR><LF> [Hex String] = Hex string up to 64bytes  
Example: SET UART\_HEX poweron 31 32 33 34 35 36<CR><LF> // [Hex1] | [Hex2] ~ is ascii string in hex value.  
Response: UART\_HEX SET poweron 31 32 33 34 35 36<CR><LF> For example, string "123", convert to correct format string is "31 32 33".

---

## 5. Troubleshooting

### Query Input Signal Status

---

GET SIG\_S<CR><LF>

Response: [Input] [Prm]<CR><LF>

Example: GET SIG\_S RXHDBT<CR><LF>

Response: SIG\_S RXHDBT Have Signal<CR><LF>

---

[Input]=VGA | DP | TXHDMI | USBC | RXHDBT | RXHDMI1 | RXHDMI2

[Output]=RX | TX [Prm] = NO Signal | Have Signal

---

### Query Unit Firmware Version

---

GET VER<CR><LF>

Response: [Prm]<CR><LF>

Example: GET VER<CR><LF>

Response:

VER MCU 1.2 tx<CR><LF>

VER ARM 1.4 tx<CR><LF>

---

[Prm] =x.x// according to actual firmware version

---

### Reboot Device

---

APP<CR><LF>

Response: APP<CR><LF>

Example: APP<CR><LF>

Response: APP<CR><LF>

---

### Restore Factory Defaults

---

SYSR<CR><LF>

Response: SYSR<CR><LF>

Example: SYSR<CR><LF>

Response: SYSR<CR><LF>

---

### Query Command List (Help)

---

HELP<CR><LF>

Response: HELP<CR><LF>

[Command List]

Example: HELP<CR><LF>

Response: HELP<CR><LF>

[Command List]

---

[Command List]=

[00]SET AUTOSW\_FN prm <CR> <LF>( To set the auto switch on/off )

[01] GET AUTOSW\_FN <CR> <LF>( To verify the auto switch status )

[02] SET KEY\_FN prm <CR> <LF>( To set key lock on/off )

[03] GET KEY\_FN <CR> <LF>( To verify the key lock status )

[04] SET SW in out<CR> <LF>( To execute a switch )

[05] SET SW in all<CR> <LF>( To execute a switch )

[06] GET MP out<CR> <LF>( To verify switch status )

[07] GET SIG\_S in<CR> <LF>( To verify input signal status )

[08] SET CEC\_FN prm<CR> <LF>( To execute a display control on/off )

[09] SET DISPAUTO\_FN prm <CR> <LF>( To define the display control automatically )

[10] GET DISPAUTO\_FN <CR> <LF>( To verify the display control Status )

[11] SET AUTOCEC\_D prm<CR> <LF>( To define a delay time to control the display off when no signal )

[12]GET VER ALL <CR> <LF>( Get all firmware version )

[13] SET UART\_B prm<CR> <LF>( To set UART baud rate )

[14] GET UART\_B<CR> <LF>( To get UART baud rate )

[15] SET UART\_E prm<CR> <LF>( To set UART end character )

---

## 6. Contacting Technical Support

Should further clarification of the content in this document or assistance on troubleshooting be required, please contact WyreStorm technical support.

Phone: UK: +44 (0) 1793 230 343 | ROW: 844.280.WYRE (9973)

Contact Request: <http://wyrestorm.com/contact-tech-support>

## 7. Document Revision History

---

### v1.2 – November 2020

---

All Sections	Updated to include SW-510-TX and SW-515-RX
--------------	--

---

### v1.1 – February 2019

---

Various	General formatting and content cleanup
---------	--

---

Controlling the Switcher and Connected Devices	<ul style="list-style-type: none"><li>• Moved to before configuration and renamed</li><li>• Moved Powering On and Off displays from Configuring CEC Section and renamed</li><li>• Added important note about using display power commands</li><li>• Moved Triggering Relay On and Off from Relay section and renamed</li><li>• Corrected typo for Triggering Relay command SET PROSCR_LR</li></ul>
--	--

---

### v1.0 – October 2018

---

All Sections	Initial Release of Document
--------------	-----------------------------

---

## Publication Disclaimer

The material contained in this document consists of information that is the sole property of WyreStorm. This document is intended to provide information to allow interfacing to the relevant WyreStorm equipment by third party products.

WYRESTORM IS NOT RESPONSIBLE FOR MALFUNCTIONS AND/OR THE IN-OPERABILITY WHICH MAY BE CAUSED BY THE APPLICATION OF THIS INFORMATION, WHETHER EXPECTED OR NOT.

WyreStorm reserves the right to change software, control codes and specifications without notice.

WyreStorm will not be liable for any use of this information or any changes it may make to those products. The use of this information constitutes an agreement by the user to these limitations and exclusions.



WyreStorm Technical Support  
UK:- +44 (0) 1793 230 343  
US/ROW: +1 844-280-WYRE (9973)  
Email: [support@wyrestorm.com](mailto:support@wyrestorm.com)

WyreStorm Offices  
North America: 23 Wood Road, Round Lake, NY 12151  
Tel: +1 518-289-1293

EMEA: Unit 22, Ergo Business Park, Swindon, Wiltshire, SN3 3JW, UK  
Tel: +44 (0) 1793 230 343

WyreStorm Technologies reserves the right to change the physical appearance or technical specification of this product at any time. Visit [wyrestorm.com](http://wyrestorm.com) for the latest product information.